



SMART START INSTRUCTIONS


⚠ ALL USERS MUST READ AND UNDERSTAND OPERATORS MANUAL!

FOR MODEL # HW4000/L, HW5500/L, HW6200/L

1 MOVE GENERATOR OUTSIDE

2 CHECK FUEL LEVEL

3 CHECK OIL LEVEL

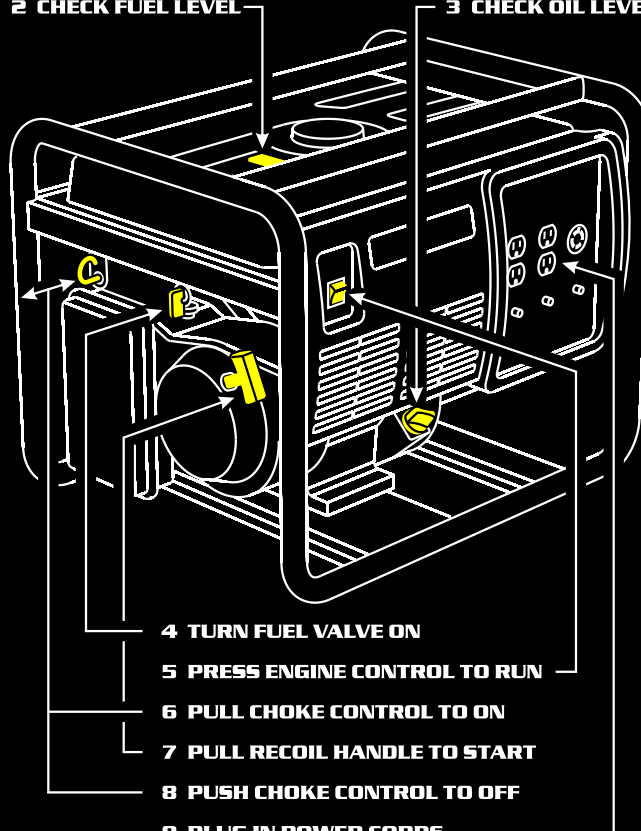

4 TURN FUEL VALVE ON

5 PRESS ENGINE CONTROL TO RUN

6 PULL CHOKE CONTROL TO ON

7 PULL RECOIL HANDLE TO START

8 PUSH CHOKE CONTROL TO OFF

9 PLUG IN POWER CORDS

STOPPING INSTRUCTIONS

1 UNPLUG ALL POWER CORDS

2 RUN UNIT 2-3 MINUTES

3 PRESS ENGINE CONTROL TO STOP

4 TURN FUEL VALVE OFF

FOR 24 HOUR STARTING INSTRUCTIONS CALL

**1-888-RECOIL-8
(732-6458)**